

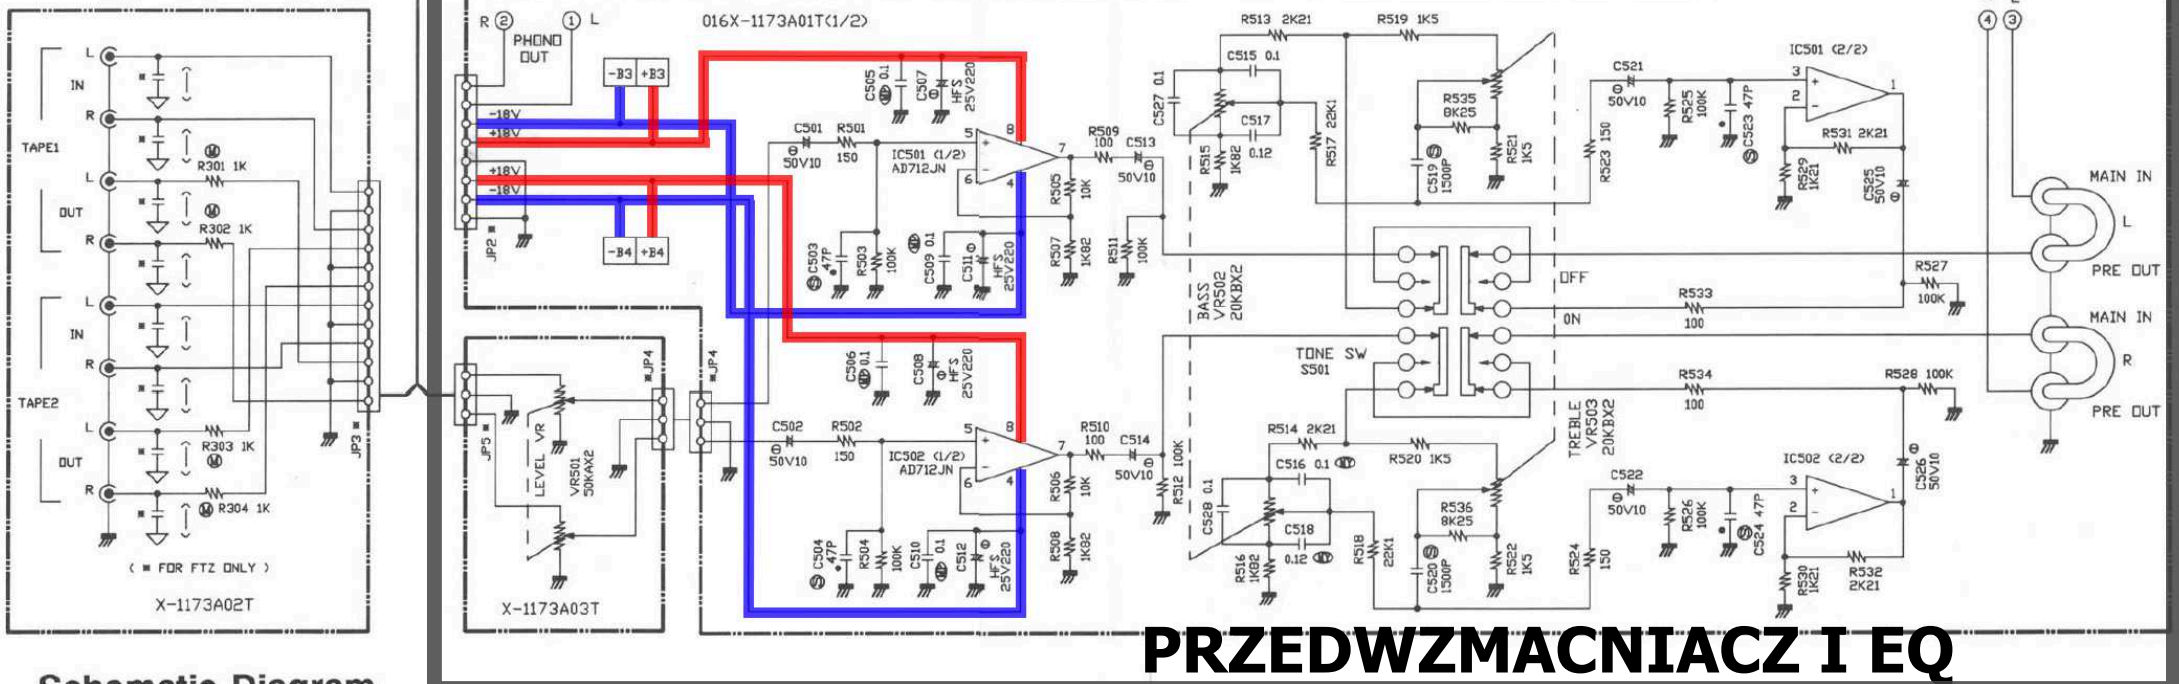


SCHEMATIC DIAGRAM MODEL RA-980BX (NOTE: PARTS AND CIRCUIT SUBJECT TO CHANGES FOR IMPROVEMENTS WITHOUT PRIOR NOTICE.)

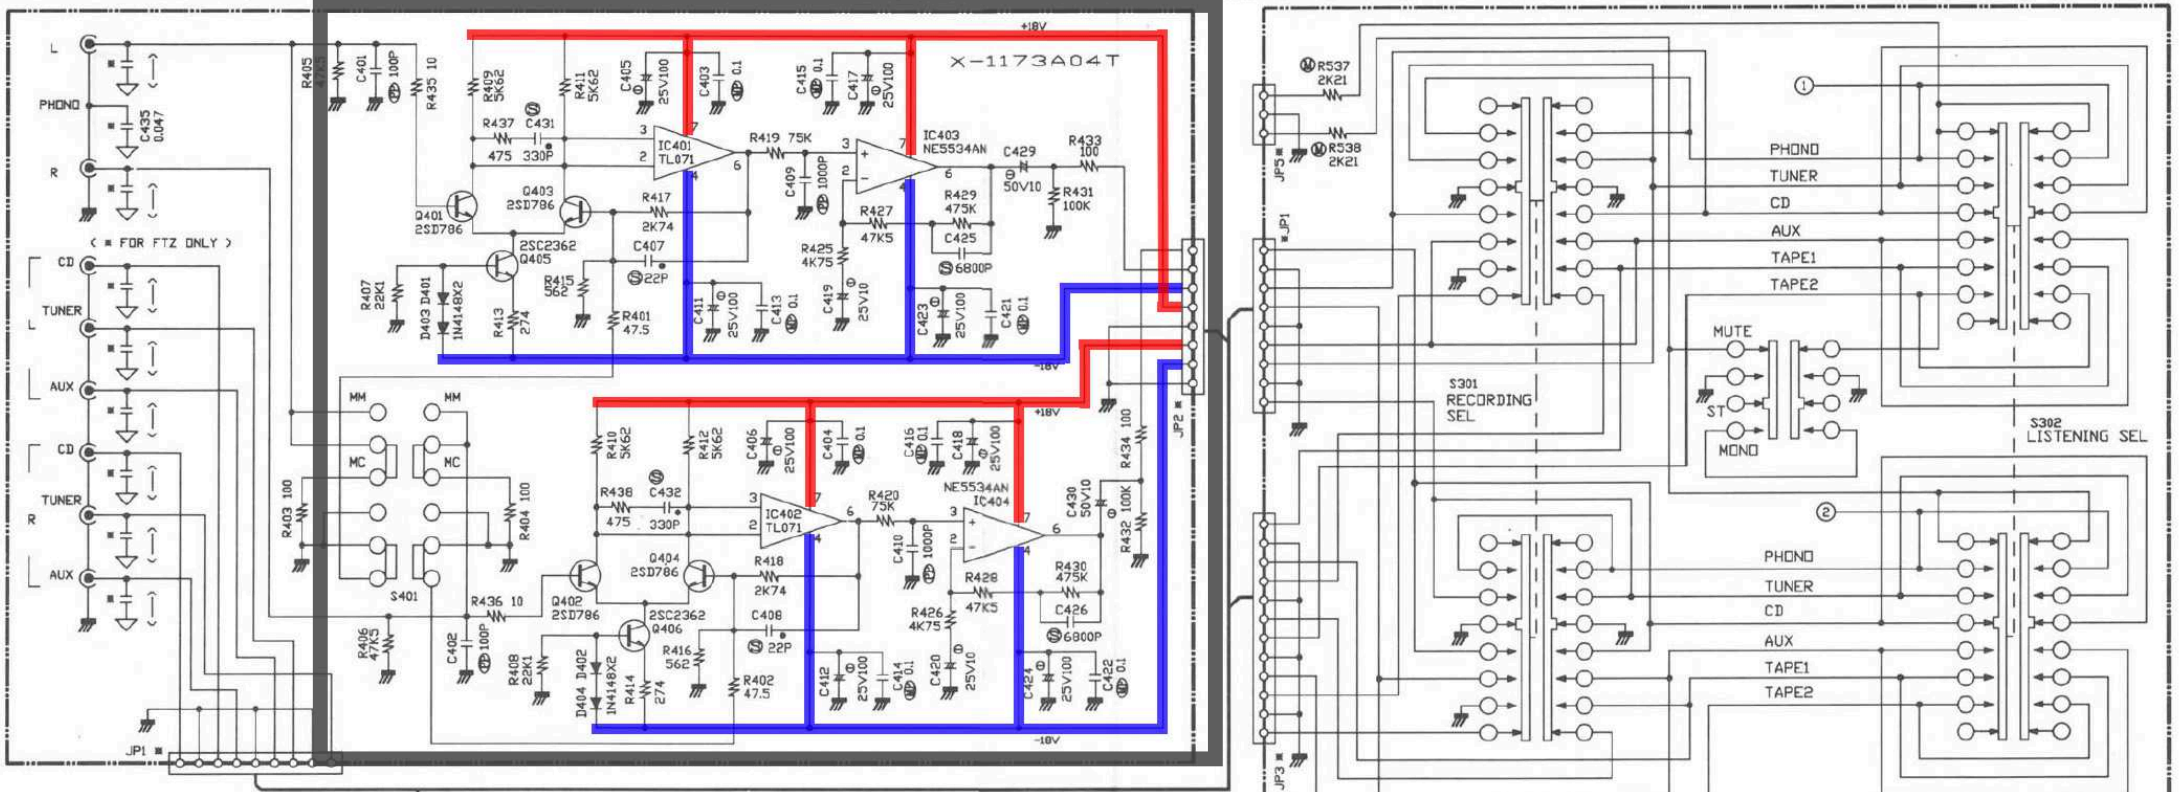

Schematic Diagram

PRZEDWZMACNIACZ I EQ

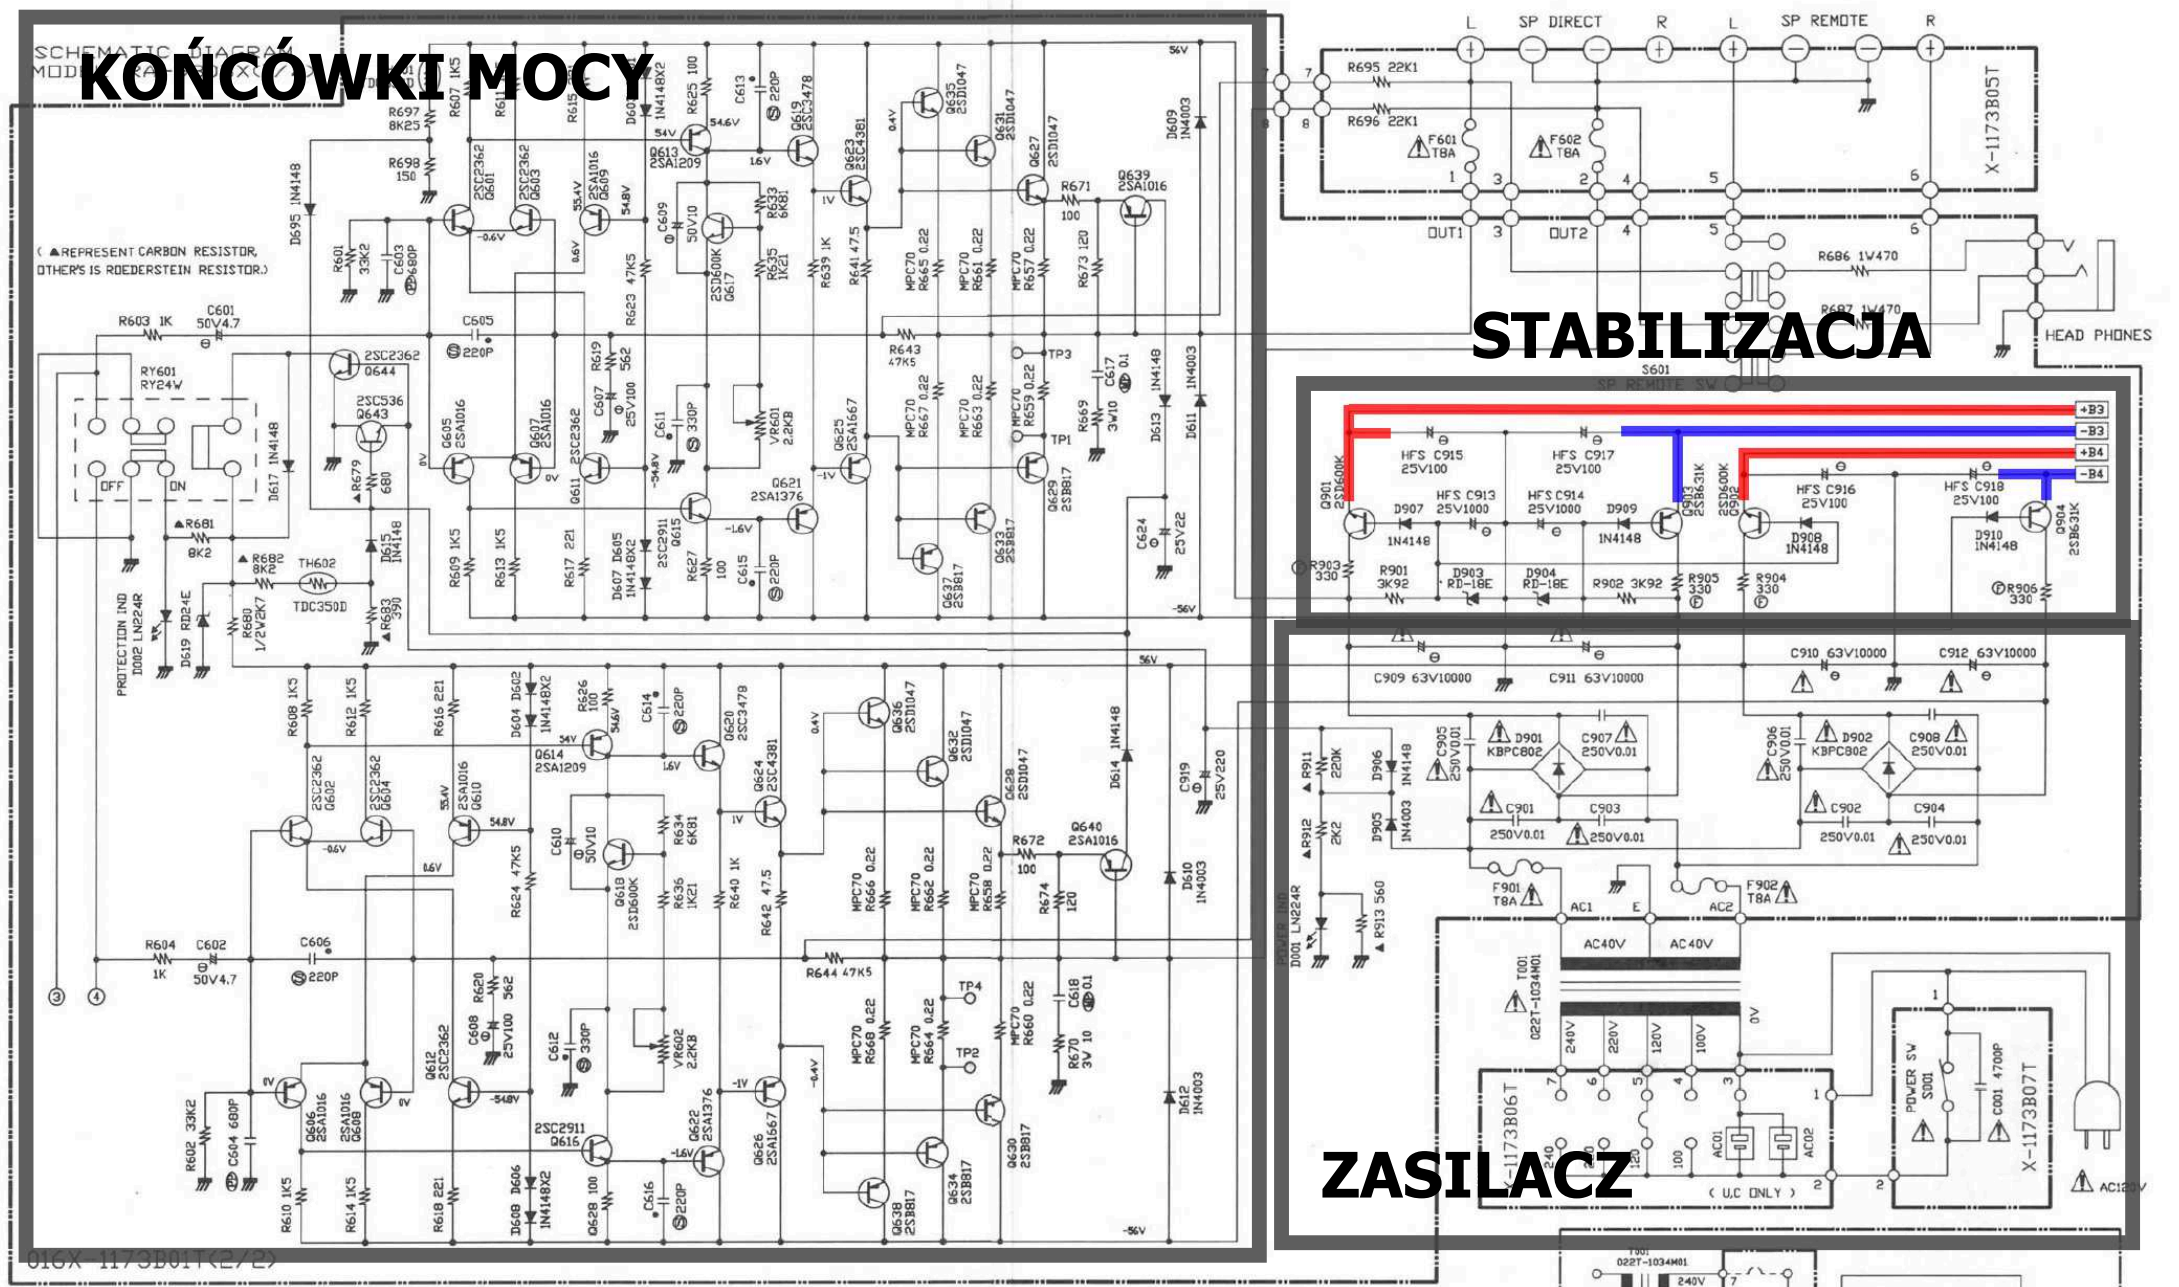

STABILIZACJA

ZASILACZ

INSTRUCTION FOR SERVICING PERSONNEL:
 1. USE ONLY REPLACEMENT PARTS THAT HAVE THE CRITICAL CHARACTERISTICS RECOMMENDED BY MANUFACTURER.
 2. MAKE LEAKAGE-CURRENT OR RESISTANCE MEASUREMENTS TO DETERMINE THAT EXPOSED PARTS ARE ACCEPTABLY INSULATED FROM THE AC SUPPLY CIRCUIT BEFORE RETURNING THE UNIT TO THE CUSTOMER.

- NE5532AN
- AD712JN
- 2SA1209
- 2SD1047
- 2SC4381
- 2SC3478
- 2SD786
- 2SA1016
- 2SC536
- 2SC2362
- 2SA1362
- 2SC3478
- 2SD786
- 2SA1016
- 2SC536

